




READ INSTRUCTIONS FULLY BEFORE COMMENCING INSTALL.


ENSURE CEILING SUBSTRATE IS FINISHED BEFORE INSERTING THE MAGPOINT.

1 DRILL HOLE

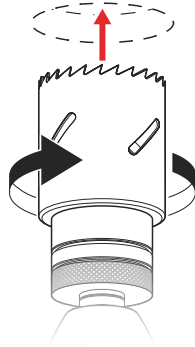


- MOUNT Ø43mm HOLES AW ON DRILL.
- PREPARE INTENDED LOCATION FOR THE FIXTURE ON CEILING AND DRILL INSERTION HOLE.

2 INSTALLATION TOOL

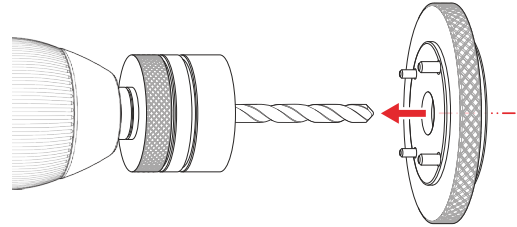


- MOUNT THE INSTALLATION TOOL ONTO THE ARBOUR ATTACHMENT ON THE HAND DRILL IN THE ORIENTATION SHOWN.

3 COUNTERSINK HOLE

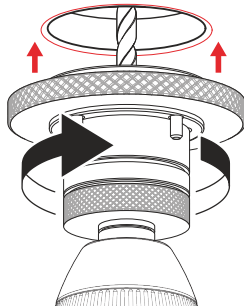


- USING THE TOOL COUNTERSINK THE EDGE OF THE HOLE IN THE SURFACE.

4 FLIP INSTALLATION TOOL

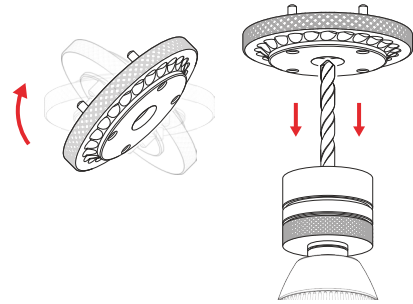


- REMOVE AND FLIP INSTALLATION TOOL SO THE PRONGS ARE FACING OUTWARDS.

5 SCREW IN MAGPOINT

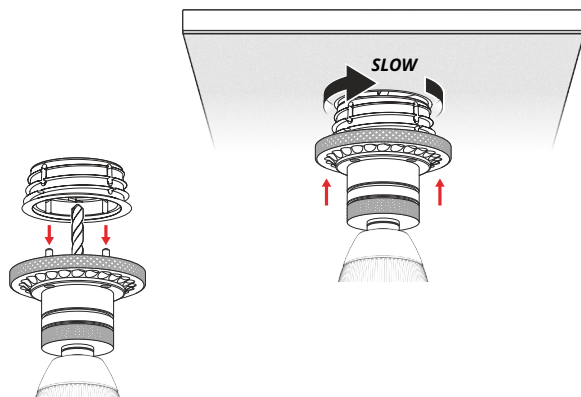

- ENSURE CEILING SUBSTRATE IS FINISHED BEFORE STARTING THIS STEP.
- LOCATE INSTALLATION TOOL ONTO MAGPOINT BEZEL, INSERTING PINS INTO SLOTS.
- SLOWLY SCREW IN MAGPOINT INTO THE SURFACE MATERIAL TILL FLUSH WITH SURFACE.

6 SECURE IN PLACE

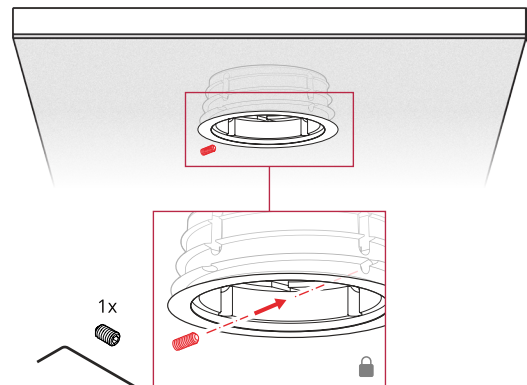

- TIGHTEN LOCKING SET-SCREW, USING 1.5MM ALLEN KEY, ENSURING IT ENGAGES INTO THE CEILING MATERIAL.