





READ INSTRUCTIONS FULLY BEFORE COMMENCING INSTALL.

1 DRILL HOLE

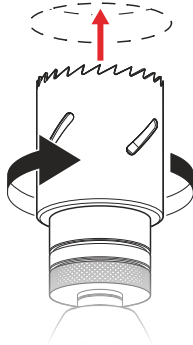


- MOUNT Ø45mm HOLES AW ON DRILL.
- PREPARE INTENDED LOCATION FOR THE FIXTURE ON CEILING AND DRILL INSERTION HOLE.

2 FIX TO SURFACE

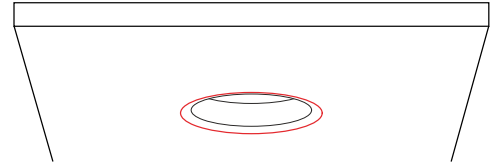


- COUNTERSINK CEILING HOLE WITH APPROPRIATE WOOD SUITABLE TOOL.

3 INSERT AND ROTATE PLATE THROUGH HOLE

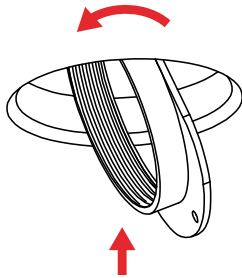


- INSERT CEILING PLATE VERTICALLY THROUGH CEILING HOLE, ROTATE 90° AND LOCATE IT INTO CONCENTRIC POSITION WITH HOLE.

4 THREAD PARTS TOGETHER

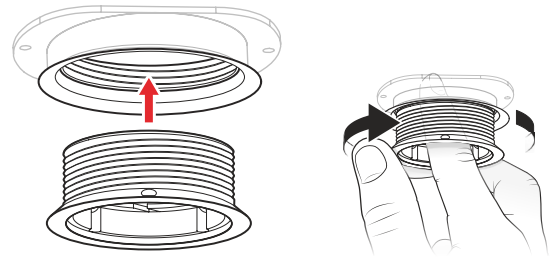


- CHECK ALIGNMENT OF PLATE'S CENTRAL THREAD SECTION WITH CEILING HOLE AND MAKE SURE IT STEPS INTO IT.
- PRESENT MAGPOINT BEZEL INTO CEILING HOLE UNTIL THREADS ENGAGE.
- THREAD MAGPOINT BEZEL INTO CEILING PLATE WHILST SUPPORTING THE PLATE IN POSITION WITH INDEX FINGER AND TWISTING BEZEL MANUALLY.

5

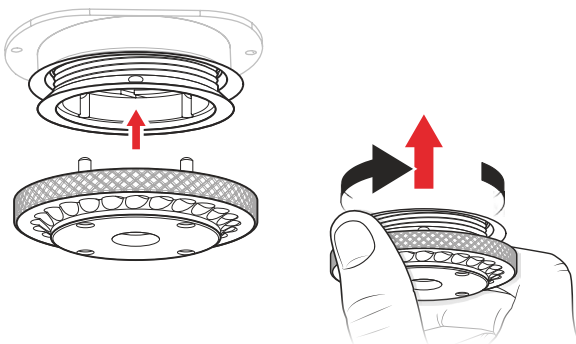

- LOCATE INSTALLATION TOOL INTO MAGPOINT BEZEL, INSERTING PINS INTO SLOTS.
- USING TM MAGPOINT INSTALLATION TOOL, HAND TIGHTEN MAGPOINT INTO CEILING UNTIL IT IS FLUSH AGAINST ITS SURFACE.

6

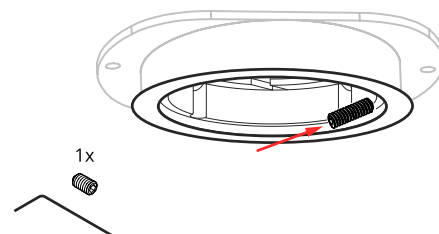

- TIGHTEN LOCKING SET-SCREW, USING 1.5MM ALLEN KEY, ENSURING IT ENGAGES INTO THE CEILING MATERIAL.