





READ INSTRUCTIONS FULLY BEFORE COMMENCING INSTALL.
ENSURE CARDBOARD INSERT IS IN PLACE BEFORE PLASTERING.

1 DRILL HOLE

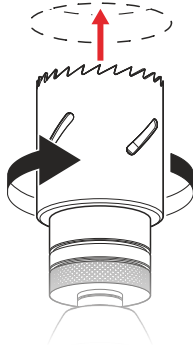


- MOUNT Ø54mm HOLES AW ON DRILL.
- PREPARE INTENDED LOCATION FOR THE FIXTURE ON CEILING AND DRILL INSERTION HOLE.

2 FIX TO SURFACE

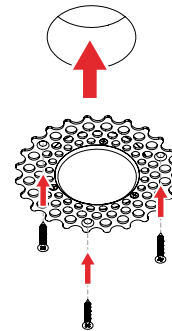


- INSERT MAGPOINT INTO DRILLED HOLE.
- FIX IN POSITION USING 3x SCREWS.

3 PLASTER SURFACE

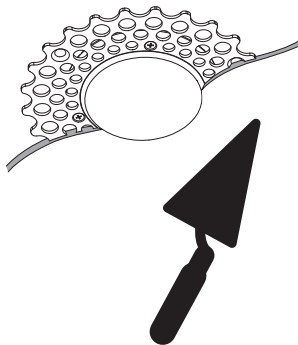


- ENSURE CARDBOARD INSERT IS INSIDE THE MAGPOINT FIXTURE TO AVOID ANY OVER SPILL.
- PLASTER OVER MESH OF THE MAGPOINT FIXTURE.

4 REMOVE CARDBOARD INSERT

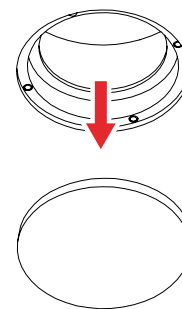


- REMOVE CARDBOARD INSERT FROM INSIDE THE HOLE.

5 INSPECT FIXTURE

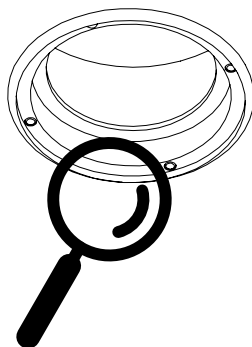

- INSPECT THE FIXTURE TO ENSURE NO PLASTER MATERIAL IS IN THE FIXTURE, AS THIS WILL PREVENT LUMINAIRE MOUNTING.
- REMOVE ANY MATERIAL IF YOU FIND SOME.

6 PREPARE HOLE FOR LUMINAIRE

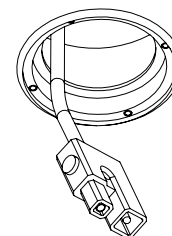

- FISH OUT THE LOW-VOLTAGE POWER CABLE.
- TO INSTALL LUMINAIRE CONNECT CABLES FROM MAGPOINT SOCKET AND LUMINAIRE (ENSURE MATCHING POLARITY).
- THE LUMINAIRE CAN THEN SLOT INTO THE MAGPOINT.